

Rupture Disk Assemblies

Rupture Disk Assemblies

The 526 rupture disk assembly is installed between either a three-way valve or receiver tank and the relief valve to prevent the weeping of refrigerant through the relief valve.

The use of the rupture disk must be in accordance with ASME Section VIII, Division 1, UG 127. The rupture disk setting must not exceed the set pressure of the relief valve. When using a rupture disk in combination with a relief valve, the relief valve discharge capacity must be de-rated by 10%.


There are two 1/8" NPT connections above the disk. These are used to provide an indication that the disk has ruptured. Pressure gauges and pressure switches can be installed in these ports (see W15 pressure gauge below).

Please contact Westermeyer Industries for all non-standard settings. Minimum order may apply.

Caution: If pressure is allowed to build above the rupture disk, it will not burst at its designed pressure.

Features

- Brass body
- Operating range -10% / +0%
- ASME Section VIII Division 1 certified and UD stamped
- Non-fragmenting disk
- Factory sealed

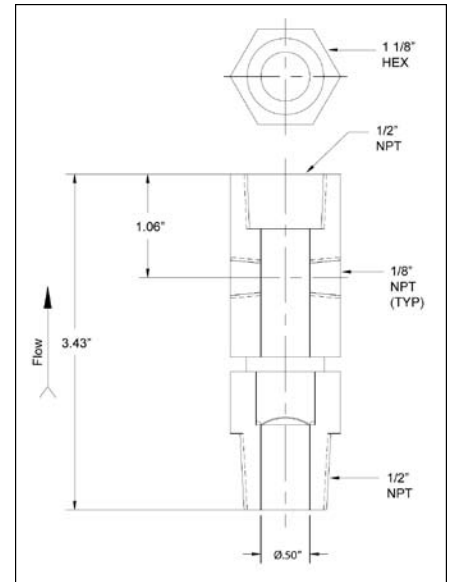

Catalog Number	Pressure Setting (psig)
526-235	235
526-250	250
526-300	300
526-350	350
526-400	400
526-450	450
526-500	500
526-550	550
526-600	600
526-650	650
526-700	700

W15 Pressure Gauge

- Pressure range: 0 to 700 psig
- Dial: 1.50" diameter
- Back connection: 1/8" NPT

